BBT2000

HEALTH DEFENDER



Quick Guide



Thank you for using Brinno Team!

Register Online and get



Register your camera for a free 6 month warranty extension and receive direct notification of firmware updates.

To learn more about the use of time-lapse photography during the COVID-19 epidemic, please go to:

www.brinno.com/covid19



To learn more about your camera's features and applications go to:

www.brinno.com/tlc2020




1. In the box

- 1) TLC2020 Time-lapse Camera x 1
- 2) Accessories box
 - a. Wall clip x 1
 - b. Camera adapter x 1
 - c. Viewfinder x 1

- d. Cleaning pad x 2
- e. Mounting tape x 1

2. Part names

- 1. Power on/off button
- 2. Shutter/ return screen button
- 3. LED status indicator
- 4. Camera lens
- 5. Camera Mount
- 6. Mount adjuster
- 7. Quick release adapter
- 8. Wall clip

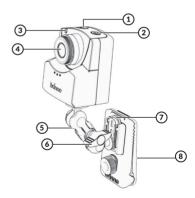

3. Camera operation

1. Power on/off.

 
Power on: Press and hold the power button ($^{\circlearrowleft}$) for 3 seconds **Power off:** Press and hold the power button ($^{\circlearrowleft}$) for 3 seconds

2. Start/stop recording

Start shooting: While on the preview screen, press the shutter (⊙) button.

Stop recording: While the screen is off, touch the shutter (\odot) button to stop recording.

- 3. The preview screen turns off while you are recording. Check the LED light indicator, if it is Flashing green then it's recording.
- 4. You can press the shutter button (①) at any time to jump back to the preview screen.





4. Camera settings

- 1. Install the memory card.
 - Δ Supports up to 128GB memory cards. The first time you use a 64GB or 128GB memory card, follow instructions on the LCD screen to format the card before using it the first time.
- 2. Open the battery cover and place the 4 AA batteries in the battery compartment.
- Δ The use of zinc carbon batteries is not recommended. For more detailed battery operating instructions, refer to the camera manual (TLC2000 series manual) included in the package.
- 3. Set the date and time. Press the OK key () and adjust the value using the (▶) and (◀) keys.
- 4. Camera parameter settings.

Menu	Options	Remarks
Menu Mode	Full Menu	Full Menu Mode
Interval	10 Min	Take a photo every 10 minutes
EXPO mode	Daytime	Suitable for daytime use
HDR	On	High dynamic effects
Schedule	Daily	Generates one AVI file per day (this setting is reccomended)
	08:00-18:00	Filming between 8am and 6pm (customizable)
	Mon-Fri	Pictures taken from Monday to Friday (customizable)
More Setting > Time Stamp	Yes	This setting will ensure all photos are time and date stamped
More Setting > Playback FPS	1FPS	This video will play one photo per second making it easy to review footage

5. Installation steps



- 1. Attach the camera mount to the quick release adapter.
- 2. Remove the camera mount and quick release adapter. Lock the adapter into place using a coin.
- Clean the back of the wall clip using one cleaning pad and glue on the backing.





- Select the area where you want to set up the camera, wipe it clean with the other cleaning pad, glue it on the wall and let it dry for 24 hours.
- After 24 hours, install the camera to the camera mount set and then install the whole set into the wall clip.
- Do not tighten the mount adjuster of the camera mount completely at this time, use the ball joint of the mount to find a suitable shooting angle.

 Δ You can also use the included viewfinder to help you find a good view angle.

 Δ If the screen turns off while you are setting up the shooting angle, press the OK button (lacktriangle) to reactivate the preview screen.

7. Turn on the camera and press the shutter button (①) to start shooting!







6. Stop recording

- 1. Press the shutter button () to stop recording.
- "PROCESSING" message will appear on the screen as the video is saved to the camera. At the same time, a beep will sound to indicate that the recording is complete.
- 3. The screen returns to the preview screen to prepare for the next shooting session.

7. Save and view footage

- 1. After stopping recording, press the power button (**b**) to turn off the camera.
- Remove the MicroSD card or use the USB-C cable to save and view recorded footage.

 Δ It is recommended that files are backed up regularly (e.g. every two weeks).

