




PeepHole Camera

Visitor Log Cam

SHC500 User Manual

1 Package Contents

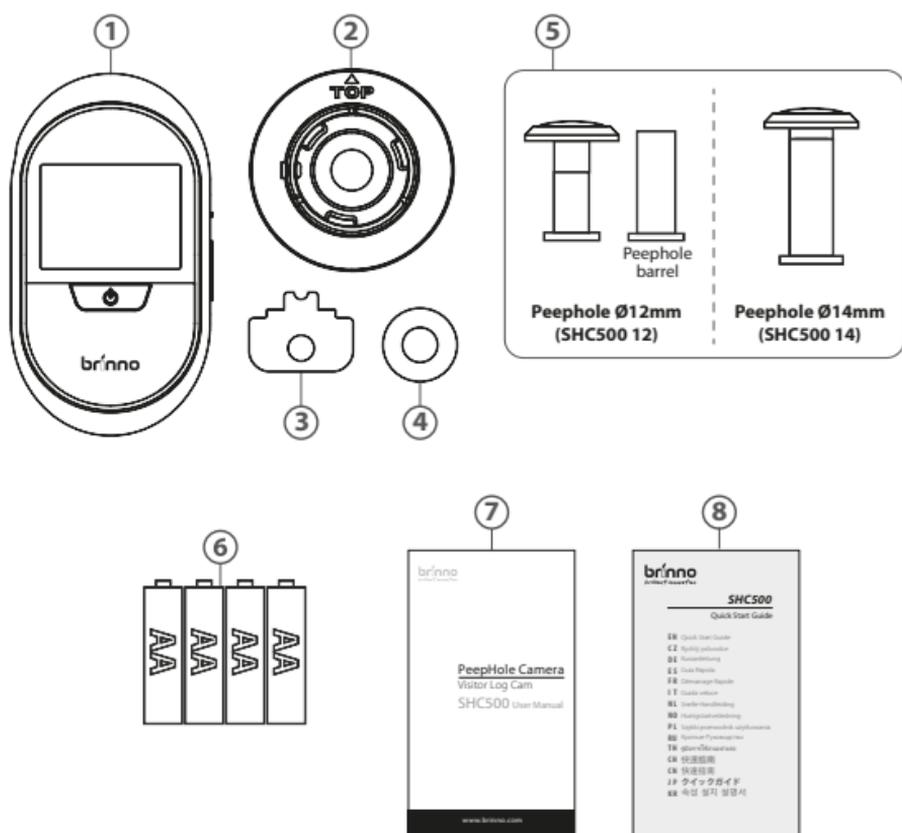

1. PeepHole Camera

2. Base Fange

3. Tightening Tool

4. Washer (**SHC500 12 only**)

5. Peephole

6. 4 AA Batteries


7. User Manual

8. Quick Start Guide



Use the peephole in the package to get the best result.

2 Device Parts

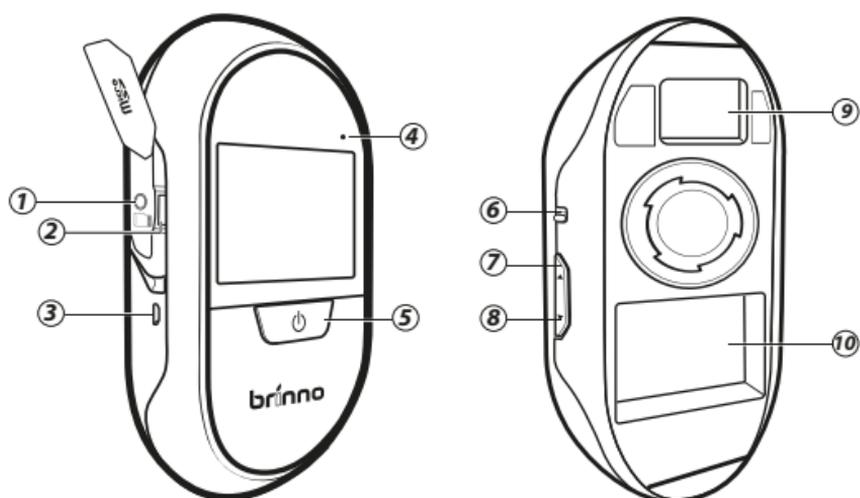


1. Locking screw
2. Micro SD card slot
3. Micro USB port
4. LED indicator
5. Power button

6. Low-light image enhancement switch
7. Up button
8. Down button
9. Extension port
10. Battery compartment


3 Display Icons

1. Image recording
2. No Micro SD card / Micro SD card error (Images will not be recorded when the error icon shows.)
3. Memory full (Images will not be recorded when memory card is full.)
4. Playback
5. Battery status
6. Enhancing low-light image

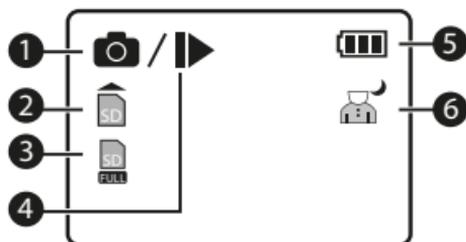


4 Insert Batteries & Micro SD Card

1. Open the battery cover
2. Insert 4 AA batteries

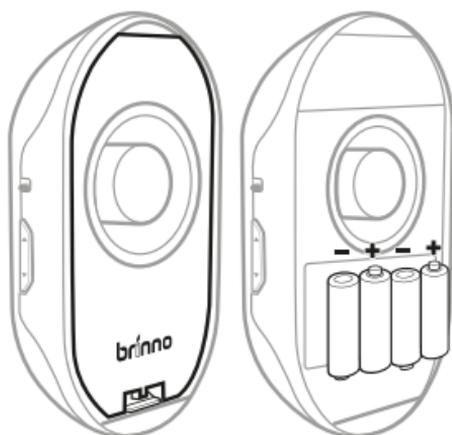

3. Insert a Micro SD Card

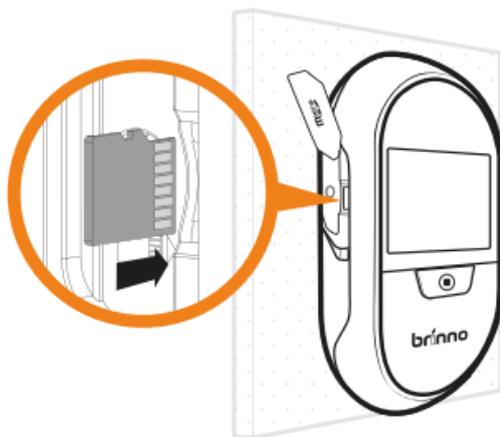

- * **Micro SD Card is not included.**
- * **Support up to 32GB Micro SD Card.**
- 8GB Class 10 is recommended.**

5 Settings


While in the **PREVIEW** screen, hold the **UP** or **DOWN** BUTTON for 3 secs to enter **SETTINGS**.



Motion Active Screen (Optional)	ON OFF
File Format	JPEG AVI
Band Filter	None 50 Hz 60 Hz
Set Date & Time	
Reset	Yes No


6 Set Up Date & Time

1

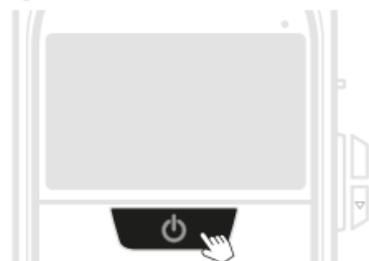


1. Press the **POWER BUTTON** for 1 sec to enter the **PREVIEW** screen.

2

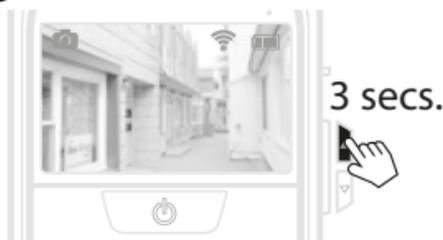

2. At the **PREVIEW** screen, hold the **UP** or **DOWN BUTTON** for 3 secs to enter **MENU SETTING**.

3

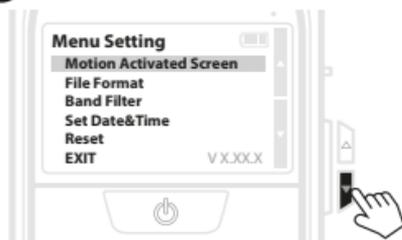


3. Scroll down the setting list by pressing the **DOWN BUTTON**.

4



4. Press the **POWER BUTTON** to select the **Set Date & Time** option.

5

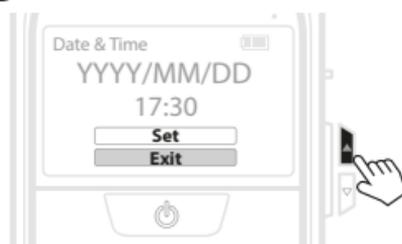


5. Find the **Set** option by pressing the **UP BUTTON**.

6. Press the **POWER BUTTON** to select the option.




7. Press the **UP** and **DOWN** **BUTTON** to select the date and time. Then, press the **POWER BUTTON** to confirm.

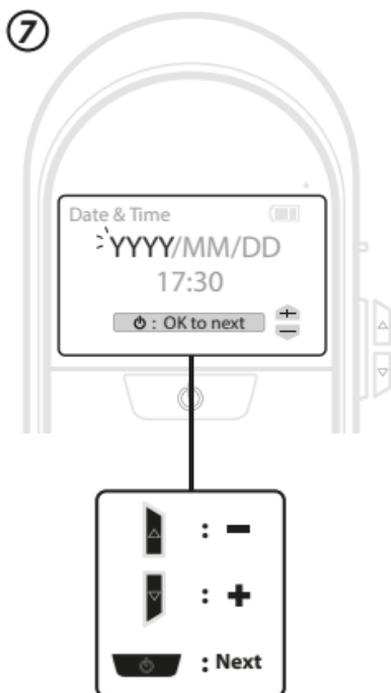

7 Install Lens & Camera


1. Remove the protective film from the peephole lens. Insert it into the exterior side of the drilled hole on the door.

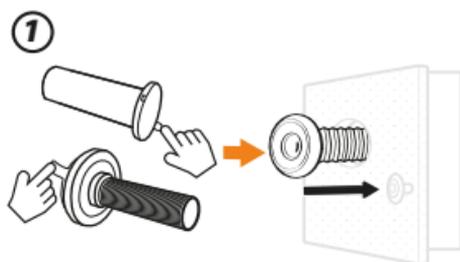


2. **For the 12mm Peephole** (For most North American users.) Position the Peephole barrel through the washer into the base flange from inside of the door. Tighten it.

For the 14mm Peephole

Position the Peephole barrel into the base flange. Tighten it.

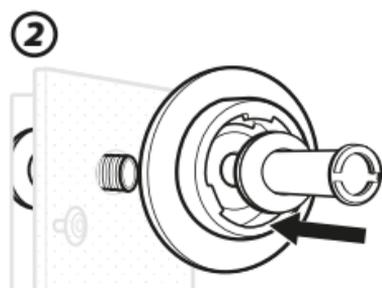


For the 12mm Peephole

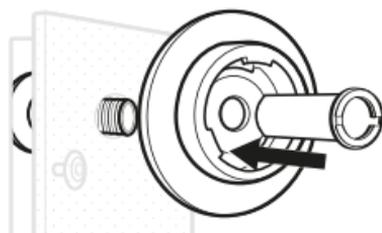


For the 14mm Peephole

3. Make sure the TOP icon is facing up.

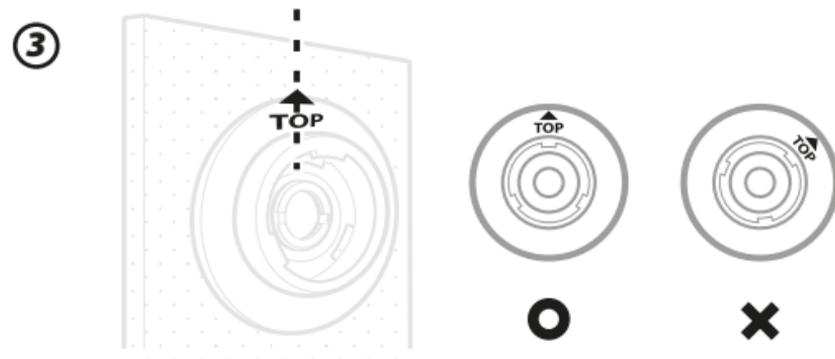

4. Use the tightening tool to tighten the peephole barrel.

⚠ Both sides of the tightening tool can be used.

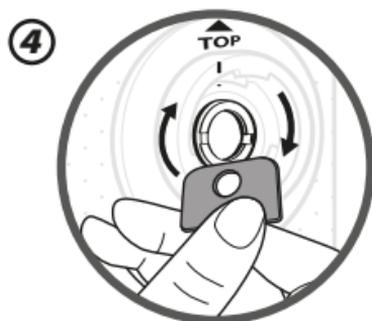

5. Remove the protective film from the lens of the camera.




6. Attach the camera to the flange. Rotate it clockwise and lock the camera.




7. Optional

The camera can be protected by using a screwdriver (as shown in the image below).

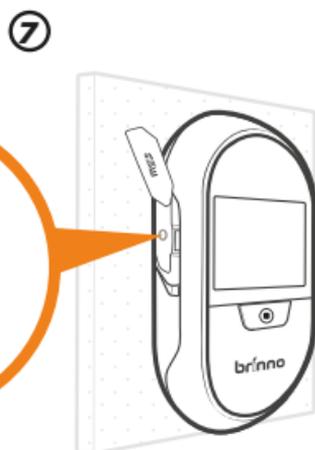

8 Live View & Capture Photo

1. Turn on the display by pressing the **POWER BUTTON**.

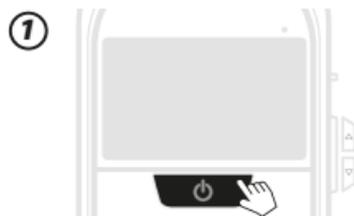

2. The LCD Panel Screen will display who is at the door.



3. Press **POWER BUTTON** again to zoom in and out on the camera.



⚠ Press the **POWER BUTTON** to view and capture visitor images.

⚠ The display will be automatically turned off to save power if the camera is not in use for 10 secs.



Power Saving Mode

9 Image Playback




UP or DOWN BUTTON
Previous or Next images

POWER BUTTON
Play or Pause

9-1 Auto Playback

1. Press the **POWER BUTTON** to enter the **PREVIEW** screen.

①

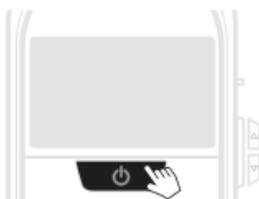

2. Press the **UP** or **DOWN** BUTTON to enter the **AUTO PLAYBACK** mode.

②



3. Hold the **POWER BUTTON** for 3 secs to exit.

③



9-2 Manual Playback

1. At **AUTO PLAYBACK** mode, press the **POWER BUTTON** to pause.

①



2. Press the **UP** BUTTON to see previous images. Press the **DOWN** BUTTON to see next images.

②



When you finish viewing all images of the current day folder, the screen will go to the daily log folder screen.

9-3 Playback by Date

1. At **AUTO PLAYBACK** mode, hold the **UP** or **DOWN BUTTON** for 3 secs to enter the daily folder screen.



2. Press the **UP** or **DOWN BUTTON** to switch folders. Press the **POWER BUTTON** to select a folder and play.



- ⚠️ **1. Playback will only play the format to which you are currently set.**
- 2. Delete function is not available. Delete files on a computer.**


10 LED Indicator

LED flashing:

Battery low. Alert to replace batteries.

LED on :

The camera is working and capturing photos.

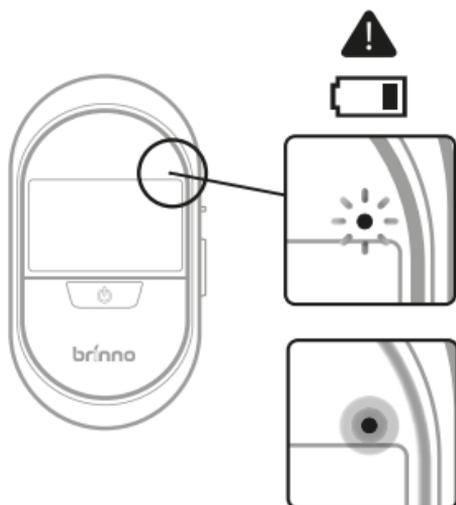

11 Auto Overwrite



When memory is full, the camera will delete the oldest MONTHLY folder to free up space as needed. Make sure you transfer files regularly to save important data.

12 Specifications

Model	SHC500 12	SHC500 14
Peephole Barrel	12 mm	14 mm
Applicable Door Thickness	Fits any door 1.10"~2.28" (28~58mm) thick	Fits any door 1.69"~3.14" (43~80mm) thick
View Angle	Regular mode: 90°, Zoom mode: 40°	
Peephole Type	Optical grade lens peephole	
LCD Screen	2.7" TFT	
Storage	Micro SD card (Support up to 32 GB, 8GB Class 10 is recommended.)	
File Format	JPEG, AVI	
Power Source	4AA batteries (Battery life: Approx. 3000 triggers)	
Contents	Peephole, Base flange, Tightening tool, 4AA batteries, User manual, Quick start guide.	
Size (WxHxD)	3.39"x6.16"x1.32" (87 x 158 x 34 mm)	
Weight	0.36lb (170g) (without batteries)	

Register @online

www.brinno.com/support/register.html



Visit Brinno.com to download manual in other languages.

brinno
brilliant innovation

